



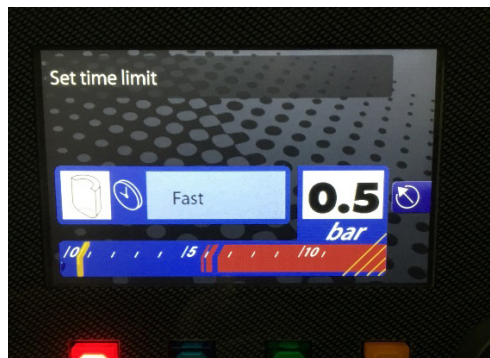

## RETURN FLOW PRESSURE TEST

We can test the Fuel / Turbo cleaning system for flow and check filter cleanliness.

- Form a loop using two pipes from the connection kit
- Add a minimum of 300 ml of injection cleaner to the fuel / turbo tank
- Select fuel system
- Press start

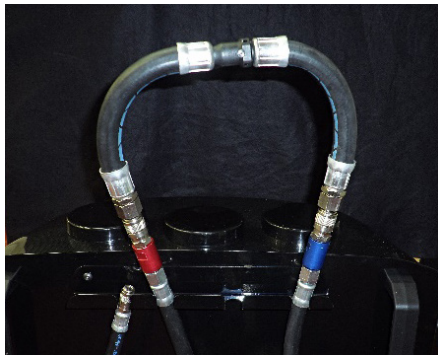

The blue pressure bar should not increase above 0.7 bar. You may see the unregulated pressure banner flashing on the screen – this is normal.

If this reading is higher remove and clean the inline filter from the blue chamber and re-test.

- Clean the filter with brake cleaner and dry with an airline.
- When re attaching the blue chamber to the hose use a small amount of Thread Locker.

